



# Инструкция по настройке QWO-880-AC-CPE





Используйте источник питания 12 В постоянного тока или адаптер 24 В РОЕ, порт WAN /PoE.

Способ подключения СРЕ, адаптера РоЕ и ПК: порт РОЕ должен подключаться к порту WAN / РОЕ СРЕ. ПК к порту LAN блока РоЕ



#### Сброс

Нажмите кнопку **Reset** на CPE более 15 секунд, затем отпустите, устройство перезагрузится и восстановится до заводских настроек

Также можно сбросить CPE на вкладке Management

Quick Setup	p System Status Operation Mode		le 5.80	5.8GHz Repeater Network Setting		Management		
Time Zone Setti	ng Log	Upg	jrade Firmware	Save/Rel	load Settings	Password		
Save/Reload Set	tings							
			Save Setti	ngs to File	Save Settings			
Load Settings from File		Upload Setting	js		浏览			
			Reset Settings	to Default	Reset Settings	5		
			Syste	m Reboot	System Reboo	ot		

You can get IP settings assigned a this capability. Otherwise, you nee	automatically if your network supports d to ask your network administrator for				
the appropriate IP settings.	52 C				
Obtain an IP address automa	stically				
• Use the following IP address:					
IP address:	192.168.188.10				
Subnet mask:	255 . 255 . 255 . 0				
Default gateway:	1				
O Obtain DNS server address (	natomaticalla				
Use the following DNS serve	r addresses:				
Preferred DNS server:					
Alternate DNS server:					

В адресной строке IE браузера прописываем адрес **AP 192.168.188.253** в окне авторизации вводим **login : Admin, Passwords:** admin

	admin	
	*****	
-		

2

После входа в систему вы можете увидеть текущее состояние СРЕ: текущий режим работы, состояние WLAN

Quick Setup			
Device Status			
Gateway Mode	Terminal	DS AP	WDS AP
(( e)) Repeater Mode	Operation N	Node:WDS Bridge Mode	
decore reserves responses	LAN Interface Setup		
O IP Camera	IP Address 192.168.188.253		
	MAC Address 44:D1:FA:0B:9A:A	Æ	
The AP Mode	Location Information		
0	AP Location		
( WISP	AP Name		
E	WLAN Status		
WDS Bridge	WLAN Status Enabled		
A dama of Casting	SSID WIRelessAP		
Advanced Settings	Channel Number 149		
CPU Frequency:535MHz	WDS AP List 44-D1-FA-08-9A-A	A	
System Memory:512 M			
CPU Usage:26%			
Memory Usage:21%			

#### Быстрая настройка

#### Gateway Mode:

Нажмите «Gateway Mode» на следующем рисунке и выберите правильный тип доступа к глобальной сети: динамический IP или PPPOE. Если вы выбираете PPPOE, вы должны заполнить имя пользователя и пароль, предоставляемый провайдером.Введите SSID, ключ (пароль SSID), аутентификацию (тип шифрования) и канал по вашему желанию. Интеллектуальный анализ поможет вам выбрать лучший канал в соответствии с текущей средой.



**Gateway Mode** 

	High-	performance Ou	tDoor 300M AP/CPE		English 🗸
Quick Setup  Quick Setup  Device Status  C  Gateway Mode	<u></u>	⊘	(	⊘	
((1)) Repeater Mode	Terminal WAN Access Type	Intelligent Analysis Refresh Channel 149	AP There are 5 APs in Channel	Select	a new rays
AP Mode	PPPOE(ADSL)	Channel 153 Channel 157 Channel 161 Channel 165	There are 1 APs in Channel There are 0 APs in Channel There are 0 APs in Channel There are 0 APs in Channel	Select Select Select	
WDS Bridge	Wireless Basic Settings			Just	
CPU Frequency:535MHz System Memory:512 M CPU Usane:21%	1				Save & Apply
Memory Usage:21%					
Firmware Version: CPE880-SPI-2T2	R-V1.1-V5.3-SFS-B2016080912044	1 System uptime: 0Day 0	H 54M 16S		

Интеллектуальный анализ

#### Режим Repeater mode

Режим **Repeater:** точка подключается к АР беспроводным мостом транслируя в прозрачном режиме настройки АР увеличивая зону покрытия.

Нажмите кнопку Scan AP в дающем меню выберете нужную точку AP и примените настройки.



#### High-performance OutDoor 300M AP/CPE

#### Режим AP camera mode



Если CPE1 в режиме работы AP, CPE2 в режиме работы Repeater , то DVR на стороне CPE1.

Если CPE1 и CPE2 в режиме работы WDS, то DVR может быть на стороне CPE1 или стороне CPE2.

	High-performance OutDoor 300M AP/CPE	English
Quick Setup       Image: Optimized status       Image: Optimized status		AP
(( )) Repeater Mode	IP Camera(Basic structure of the network graph)	
O IP Camera	Mode	
The AP Mode	Wireless Basic Settings Repeater(VCP) Mode Resets Station (AP) Mode Size (VUIIIIK-3-80 (max 32 characters)	
((💽 WISP	Channel 149 - 5745MHz V Intelligent Analysis Authentication Open V	
WDS Bridge		Save & Apply
Advanced Settings		
CPU Frequency:535MHz		
System Memory:512 M		
CPU Usage:19%		
Memory Usage:19%		
Firmware Version: CPE880-SPI-21		

#### Режим AP Mode

Режим **АР**: беспроводное подключения клиентов к АР для выхода в сеть WAN интернет

	High-perform	nance OutDoor 300M AF	P/CPE	English
Quick Setup       Outlook       Device Status       Stateway Mode	Terminal 💛	AP	← ⊙	Switch
(( )) Repeater Mode		AP Mode(Basic structure of	f the network graph)	
IP Camera	Location Information AP Location AP Name			
Terr AP Mode	Wireless Basic Settings			
((💽 WISP	SSID	/unlink-5.8G	(max 32 characters)	
WDS Bridge	Authentication		5	
Advanced Settings	Key	566666666		
CPU Frequency:535MHz System Memory:512 M				Save & Apply
CPU Usage:19%				
Memory Usage:19%				

Настройте местоположение и имя AP. Введите SSID, аутентификацию (тип шифрования) и канал по вашему желанию. Интеллектуальный анализ поможет вам выбрать лучший канал в соответствии с текущей средой. Затем Save & Appl

#### Режим WISP

Режим WISP используется для подключения к беспроводной точке провайдера по радио для выхода в WAN интернет

		High-performance OutDoor 300	OMAP/CPE		English
Quick Setup Outice Status Gateway Mode	AP	<u>.</u>		0	(internet
((•)) Repeater Mode		WISP(Basic struct	ture of the network graph)		
IP Camera	WAN Access Ty	1 WAN Access Type DynamicIP V			
AP Mode	PPPOE(ADSL)	User Name			
WISP	WISP	Password	_		
WDS Bridge		2 SSID yunlink-5.8G Scan	AP skmac		
Advanced Settings		Authentication Open V		Channel  149	Save & Apply
CPU Frequency:535MHz System Memory:512 M					
CPU Usage:19%					
lemory Usage: 19%					
mware Version: CPE880-SPI-2T	12R-V1.1-V5.3-SFS-B20	160809120441 System uptime: 0Day 2H 23M 58S			

Настройте режим доступа WAN.Нажмите ScanAP выберите точку AP и метод шифрования Затем Save & Appl

## WDS Mode

Этот режим используется для организации беспрводных сетей топологии РТР или РТМР. Пользователь может настроить местоположение и имя AP, SSID, аутентификацию (тип шифрования) и канал по вашему желанию. После этой настройки вы можете сканировать AP, чтобы выбрать SSID. Вы можете выбрать только CPE с тем же каналом и тем же типом шифрования. Затем Save & Apply. При использовании режима WDS рекомендуется настроить каждый CPE с другим IP-адресом.

	High-performance OutDoor 300M AP/CPE	English v
Quick Setup Device Status		
(° )) Gateway Mode	Terminal WDS AP WDS AP WDS AP	
IP Camera     AP Mode	AP Location Information AP Location AP lame	
(IIII) WISP	Wireless Basic Settings           SSO         yunlink-5.8G           Channel         149 - 5745MHz v           Intelligent Analysis	-
WDS Bridge	Authentication Open V WDS Settings	
Advanced Settlings CPU Frequency:535MHz System Memory:512 M CPU Usage:19% Memory Usage:19%	AP BSSD ScanAP AP BSSD ScanAP AP BSSD ScanAP AP BSSD ScanAP Save &	Apply

## **Advanced Settings**

#### **System Status**

В статусе системы вы увидите версию прошивки, время сборки, время безотказной работы системы.



### 5.8GHz Wireless Status

High-performance OutDoor 300M AP/CPE									
Quick Setup	System Status	Operatio	n Mode	5.8GHz Wireles	s Network Setting	Management			
System Status		Status L	AN Status						English 🗸
WLAN Status									
		5.8GHz	WLAN Status	AP(Enabled)					
	Channel-Band			5GHz(AN) cha	annel149				
			SSIE	gh (Broadcas	gh (Broadcast)				
			BSSIE	78:D3:8D:E9:F6	78:D3:8D:E9:F6:39				
			Encryption	Open					
	MAC Address			78:D3:8D:E9:F6	39				
			WDS AP Lis	78:D3:8D:D3:A9	0.02				
		Access	Control Mode	Allow All					
			Client Table	Client Table	Client Number[ 1 ]				

Основная информация по базовым настройкам беспроводной сети 5.8ГГц

#### LAN status

Quick Setup	System Status	Operation Mode	5.8GHz Repeater	Network Setting	Management
System Status	5.8GHz Wireless	s Status LAN Sta			
AN Status					
		IP.A	ddress 192.168.18	8.253	
		Subne	t Mask 255.255.25	5.0	
		DHCP	Server Disabled		
		MAC A	ddress 78:D3:8D:B	F:CE:C4	

#### Настройки LAN

#### **Operation Mode**

Quick Setup System Status	Operation Mode	5.8GHz Repeater	Network Setting	Management	
Operation Mode					English
Operation Mode					
O Gateway Mode		In this mode LAN ports s PPPOE, DF	e, the device is s hare the same IF ICP client or stat	upposed to cor P to ISP throug tic IP.	nect to internet via ADSL/Cable Modem. The NAT is enabled and h WAN port. The connection type can be setup in WAN page by us
Repeater Mode		In this mode are not sup	e, all ports are br ported.	idged together	and NAT function is disabled. All the WAN related function and fire
O WISP Mode		is enabled a client mode using PPPC	and PCs in ether first and connec DE, DHCP client	net ports share t to the ISP AP or static IP.	together and the wireless client will connect to ISP access point. I the same IP to ISP through wireless LAN. You must set the wirele in Site-Survey page. The connection type can be setup in WAN point.
O AP Mode		In this mode related fund	e, the AP wireles tions.	s interface and	cable interface bridging together. Without NAT, firewall and all net
					Apply Changes

#### Описание основных режимов работы СРЕ

#### 5.8GHz Wireless

#### 5Ghz Basic

В этой вкладке пользователь может настроить SSID, тип шифрования, пароль SSID. Интеллектуальный анализ

поможет вам выбрать лучший канал в соответствии с текущей средой.

			High-perfoi	mance OutDo	or 300M AP/CPE						
Quick Setup	System Status	Operation Mode	5.8GHz Wireless	Network Setting	Management						
	WDS Bridge Setting	5.8GHz Virtual AP	VLAN Setting	5.8GHz Access Control	5.8GHz Advanced	English 🗸					
Wireless Basic	Settings										
		Statu	O Disabled	nabled							
		SSI	gh	11	(max 32 characters)						
		AP Name	£								
		AP Location									
		Ban	5 GHz (AN) 🗸	5 GHz (AN) 🗸							
		Breadcast SSI	Obisabled	Obisabled   Enabled							
		VIM	Objabled  Enabled								
hannel											
		Channel Widt	20MHz	20MHz v							
		Channel Numbe	149 - 5745MHz	V Intelligent Analysis							
Security											
		Authentication	Open	~							
						Save & Apply					

## WDS Bridge Setting

Quick Setup	System Status	Operation M	lode	5.8GHz Wireless	Network Setting	Management				
5.8GHz Basic		5.8GHz Virtual AF		VLAN Setting	5.8GHz Access Control	5.8GHz Advanced		English		
WDS Settings										
Wireless Basic Settings Authentication(Open) Channel(149)										
AP BSSID 78:D			78:D3:8	D:D3:A9:C2	ScanAP	AP Comment				
AP BSSID					ScanAP	AP Comment				
AP BSSID					ScanAP	AP Comment				
APBSSID					ScanAP	AP Comment				

#### 5.8Ghz Virtual AP

Quick Setup	System Status	Operation Mode	5.8GHz Wireless	Network Setting	Management								
5.8GHz Basic	WDS Bridge Setting	5.8GHz Virtual AP	VLAN Setting	5.8GHz Access Control	5.8GHz Advanced				English				
lireless VAP S	ettings												
		VAP Interface	Obisabled OE	inabled									
		SSIE		(max 32 characters)									
		Broadcast SSE	ODisabled C	Obisabled O Enabled									
		VVMb	ODisabled C	Obisabled C Enabled									
		Authentication	Open	Open 🗸									
		Key Length	O Wep 64 Bit	Wep 128 Bit									
		Cipher Sulte											
		Key Forma	ASCII(5 characte	rs) v									
		Key											
			,					Sav	e & Apply 📕 R				
State	19	Band	SSIE		Broadcast SSID	Rate	WMM	Security	Edit				
d](01	D) 111	NAHT40	Wireless	AP1	Enabled	Auto	Enabled	Open	0				
(OI)	i) 11	NAHT40	Wireless	AP2	Enabled	Auto	Enabled	Open	0				
	0 11	NAHT40	Wireless	AP3	Enabled	Auto	Enabled	Open	0				

## Management

## Time Zone Setting

Вы можете выбрать часовой пояс. Синхронизация с сервером времени доступна только в режиме Gateway, WISP.

High-performance OutDoor 300N	1AP	/CPE
-------------------------------	-----	------

Quick Setup System Status Operation Mode	5.8GHz Wireless Network Setting Management
Time Zone Setting Signal Tracking Log Upgrade Fi	rmware Backup/Restore Settings Password English x
Time Zone Setting	
Current Time	2015-01-01 15:57:06 Sync with host
Time Zone Select	(GMT+08:00)Beijing, Chongqing, Hong Kong, Urumqi $\lor$
	Enable NTP client update
NTP Server	192.5.41.41 - North America
	O 0.0.0 (Manual IP Setting)
	When device running at 0:00 🗸 Automatic optimization system
	Save & Apply Cance

## Signal Tracking

-

Сканирование АР для контроля уровня сигнала.

			High-	performance Ou	tDoor 300M AP/	CPE	
Quick Setup Time Zone Settin	System Status	Operatio Log	n Mode 5.8GHz V Upgrade Firmware	Backup/Restore Settings	Password		English 🗸
Signal Tracking			MC.				
		SS	vunlink-5.8G		ScanAP		
		BSS	0 78:D3:8D:D3:A9:0	2 Stop Tracking			
	5	Signal Streng	th in the second se	-62 dBm			
		Track State	Js Track Ongoing	(Tracked 15 times)			
In the proce	edure of signal tracl	king, the ur	expectable effects	probably occur in Tx/Rx da	ta transaction. Please pres	s Stop Tracking button instantly afte	er signal tracking!

#### LOG

Включенный системный журнал поможет вам сохранить историю работы устройства. Вы можете скопировать

#### журнал и отправить в техподдержку

			Hig	h-perfor	mance Ou	tDoor 30	0MAP/CPE			
Quick Setup	System Status	Operatio	n Mode 5.8G	lz Wireless	Network Setti	ng Manage	ement			
Time Zone Setting	Signal Tracking	Log	Upgrade Firmwa	e Backup	/Restore Settings	Password			English	~
System Log										
		Remot	system log O	Disabled (0	Enabled					
									Save &	Apply
1970-01-01 00: 1970-01-01 00:	00:10 [Informa 00:10 [Notice] 01:32:07 CST 20 00:10 [Warning 00:10 [Warning 00:10 [Warning 00:10 [Warning 00:10 [Warning 00:10 [Warning 00:10 [Informa 00:10 [Informa 00:10 [Informa 00:10 [Informa	tional] ( CPE880 u CPE880 u 16 ] CPE880 ] CPE880 ] CPE880 ] CPE880 ] CPE880 ] CPE880 [] CPE880 tional] ( tional] ( tional] (	272580 syslog iser.notice ke user.warn ker user.warn ker user.warn ker user.warn ker user.warn ker user.warn ker 272580 user.ir 272580 user.ir 272580 user.ir	info sysic rnel: klog rnel: Linu nel: arg 1 nel: arg 2 nel: arg 4 nel: arg 6 (firmware nel: arg 6 fo kernel: fo kernel: fo kernel:	gd started: B (d started: Bu (x version 2.6 : consolerty) : root=31:02 : root=31:02 : root=stype= : init=/sbin/ : meme64M CPU revision Usg_frequency: Determined p memory: 020 Usg=cdefined	<pre>syBox v1.15 syBox v1.15 syBox v1.15 syBox v1.15 solution squashfs,jff init n-nor0:64k(t k(ART),812 is: 0001974 cpu srif dd nysical RAM 00000 @ 0000 physical RA</pre>	5.0 0 (2016-08-09 12:03:44 CBT) .5.5.36 (root@localhost.localdom ader = 8 fs2 u-boot),64k(u- c8k@0x00000(firmware2) ac (MIDS 74Kc) tr srif cpu 535 ddr 400 ahb 200 map: 00000 (usable) M map:	in) (gcc version 4.3	.3 (GCC) )	<b>^</b>
									Refresh	Clear

#### **Upgrade Firmware**

Нажмите кнопку Обновление прошивки, затем просмотрите и выберите прошивку, которую необходимо обновить, затем нажмите

«Обновить». После обновления перезагрузите устройство.

Quick Setup	Sys	tem Stat	n Status Operation Mode 5.8GI		GHz Repeater Network Setting		Management								
Time Zone Setti	ing	Log	Upg	rade Firmware	Save/Re	eload Settings	Password								English
Upgrade Firmwa	are														
Firmware Version CPE880-SPI-2T2R-V1.1-V5.3-B20150505203256															
					Build Time	20150505203256									
				Select File					Bro	wser Upgrade					
Note: do not power off the device during the upload because it may crash the system!															

#### High-performance OutDoor 300M AP/CPE



Изменение имени пользователя и пароля входа в систему

#### High-performance OutDoor 300M AP/CPE

