
Keyboard connection instructor


PROPERTY RIGHTS RESERVED

1、 Hardware requirement


- 1) The keyboard



- 2) The convertor

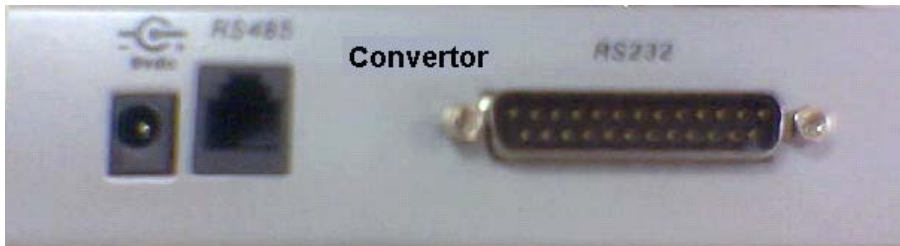

- 3) The fittings

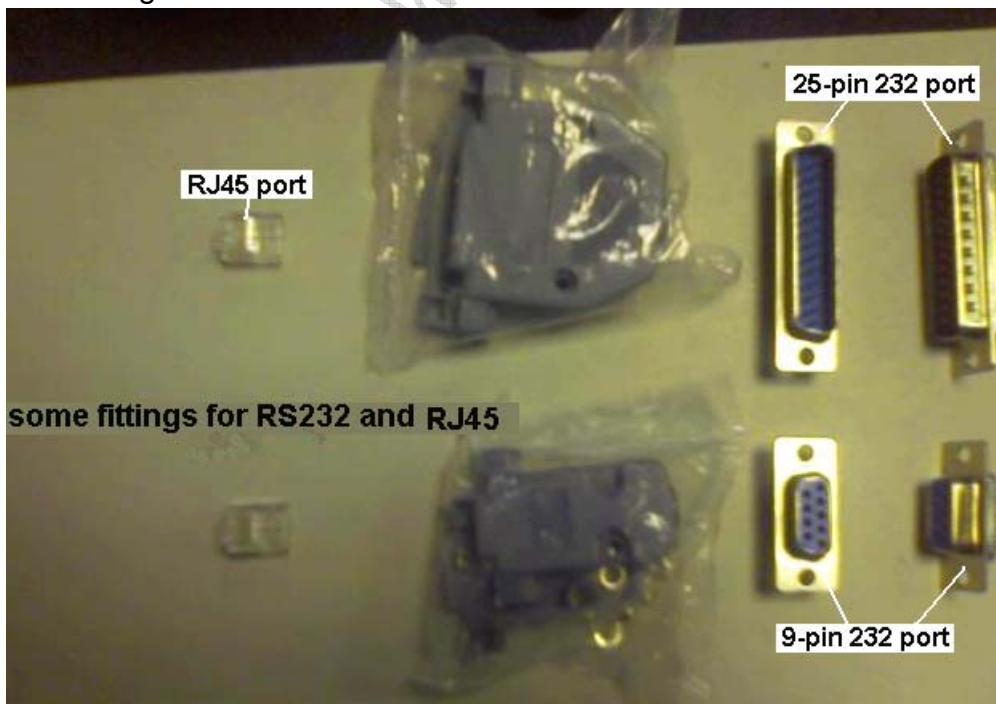


- 4) Some cables

2、 Cable preparation


1) RJ45 to RS 485 cable

A、 Connection

Connect the 7th, 9th pin of the RS485 port (please use male port) to the 2th, 3th pin of the RJ45 port, and 1th, 5th pin of the RS485 port to the 4th, 5th pin of the RJ45 port

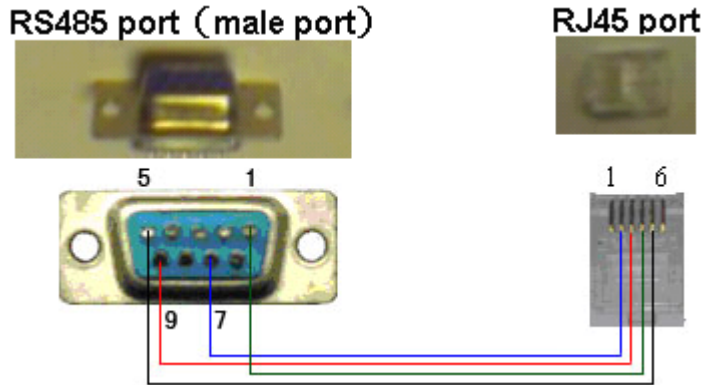


B、 The completed cable is like this

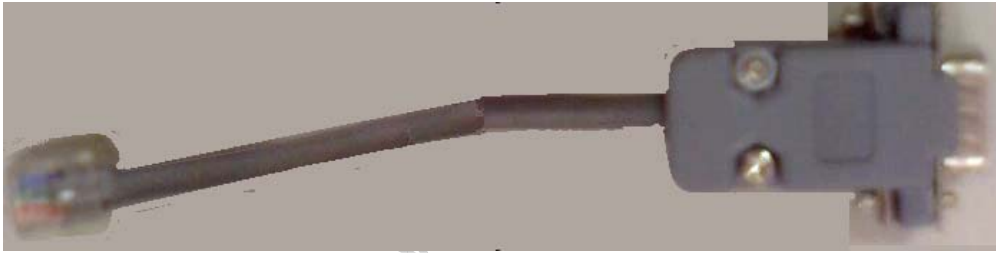

C、 Purpose

Connect the cable from the RJ45 port of converter to the RS485 port of the keyboard

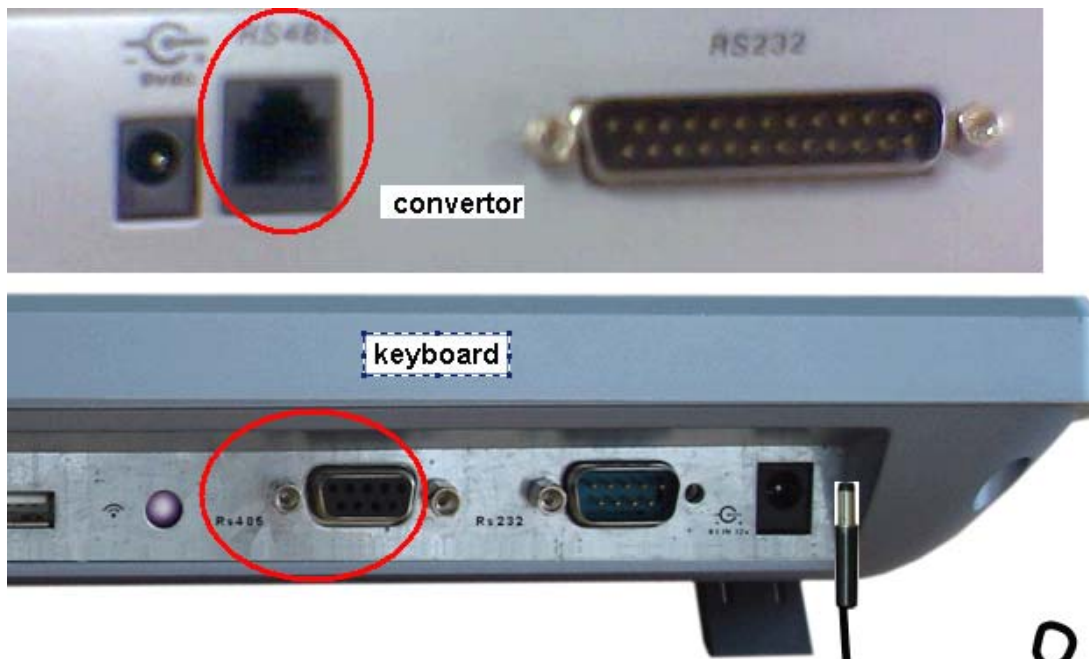

2) RS 232 cable

A、 Connection


Connect the certain pin of the 25-pin RS232 port (please use female port) to the 2th, 5th pin of the 9-pin RS232 port (please use female port)

You can parallel connect most to 255 the 9-pin RS232 ports

25-pin RS232 port (female port)



9-pin RS232 port (female port)

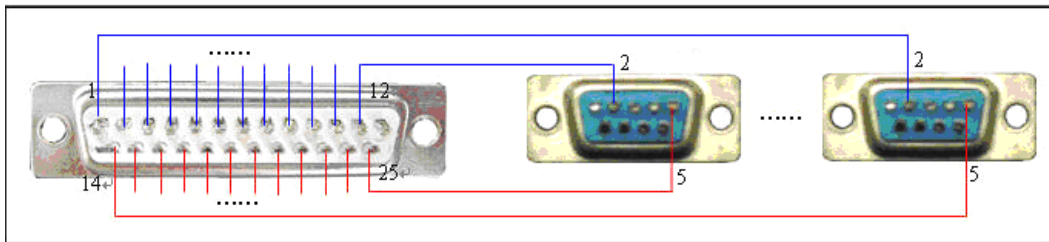


B、 The completed cable is like this



C、 Purpose


Connect the cable from the RS232 port of the convertor to the RS23 port of the DVR

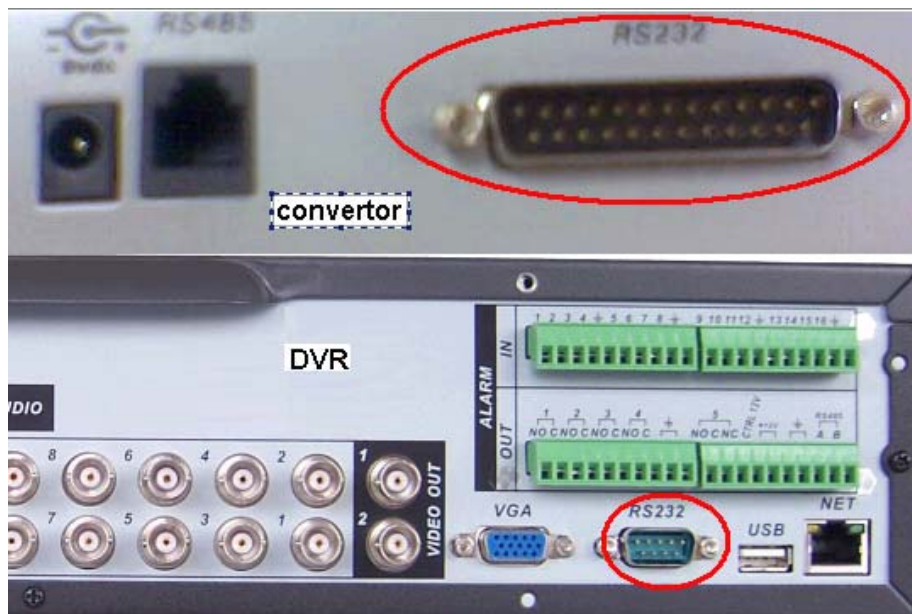


3) DVR and Keyboard settings

Must as below:

1. Must choose DVR-2 for Keyboard

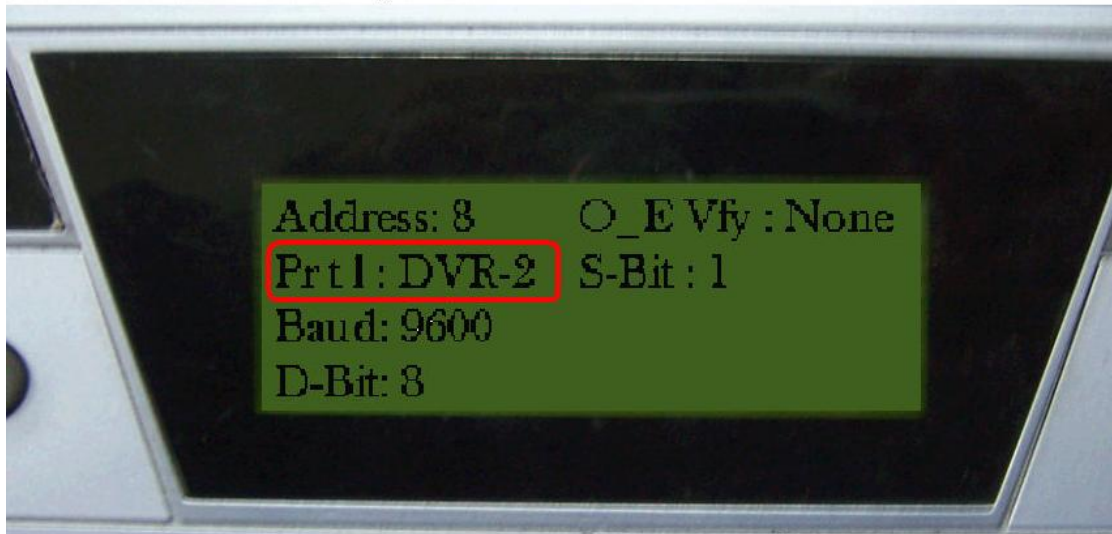

2. Must choose Netkeyboard for DVR

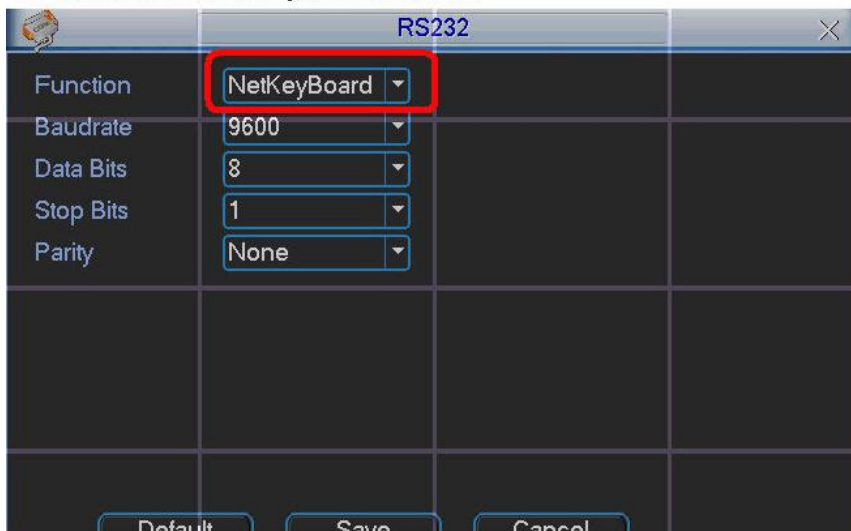

More Details

If you still have any problems about these functions, please contact with our engineers.