

UPS Monitoring Software

User Manual

Emily2

For

Microsoft Windows 2000

Microsoft Windows XP

Microsoft Windows Server 2003

Microsoft Windows VISTA

Microsoft Windows 7

Microsoft Windows 8

Microsoft Windows Server 2008 R2

Microsoft Windows Server 2012

Microsoft Windows 10

Microsoft Windows Server 2016

Table of Contents

1.	Installation & Settings	2
1.1	Note.....	2
1.2	Installation Instructions.....	2
1.3	Instructions on Removing Emily2 Program.....	5
2.	Function Descriptions	6
2.1	Real-Time Information Monitoring Display	6
2.2	Control	11
2.3	General Setting.....	11
2.4	SMS.....	17
2.5	E-Mail Settings	19
2.6	Data Log.....	20
2.7	Event log	22
2.8	Schedule	24
2.9	Oscillograph.....	28
2.10	Power Abnormal Alarm	29
2.11	About.....	29

1. Installation & Settings

1.1 Note

- Operating OS: Windows 2000 / XP / Server 2003 / Vista / 7 / 8 / Server 2008 R2 / Server 2012 / 10 / Server 2016.
- Other Software Conditions:
 1. MDAC 2.8. (windows 2000 Only)
<http://www.microsoft.com/downloads/details.aspx?familyid=6C050FE3-C795-4B7D-B037-185D0506396C&displaylang=en>
 2. For Windows Installer 3.0 and above.
 3. For Framework 2.0 and above.
- Peripherals: Use either a serial port or USB.


1.2 Installation Instructions

1.2.1 Please login as an Administrator.


1.2.2 Double click to execute “Setup”.




1.2.3 Click “Next” to next step.

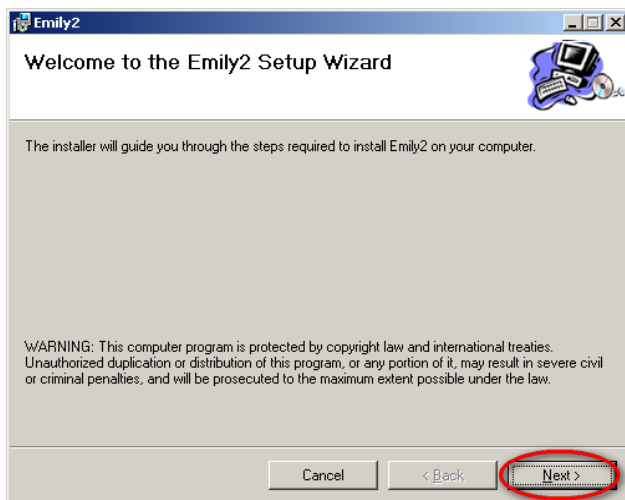


1.2.4 Enter “Select Installation Folder” to select the desire location for Emily program. (Default: C:\Program Files\Emily2.) Choose the user (yourself or anyone) who uses this software.Click “Next” to next step.

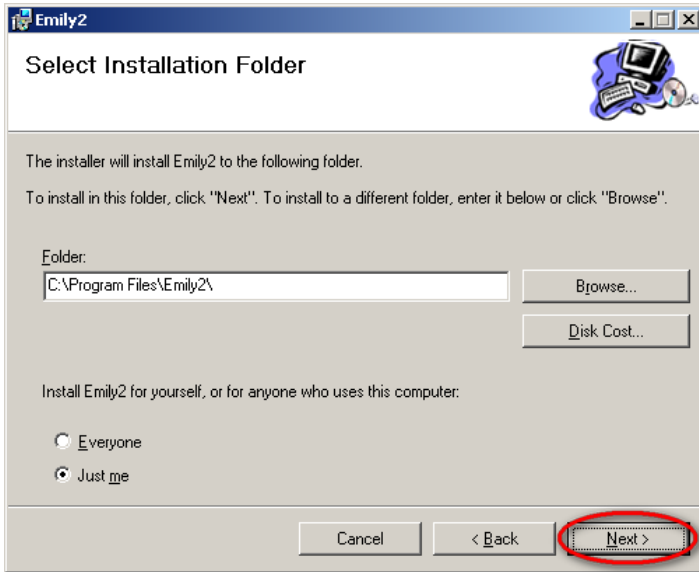


1.2.5 Enter “Confirm Installation” to ensure the completed installation of Emily2. Click “Next” to next step.

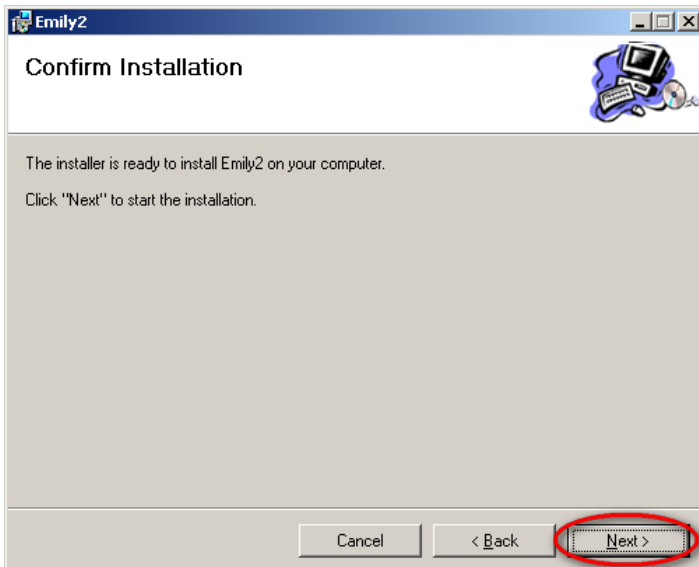

1.2.6 Installing Emily2 program.

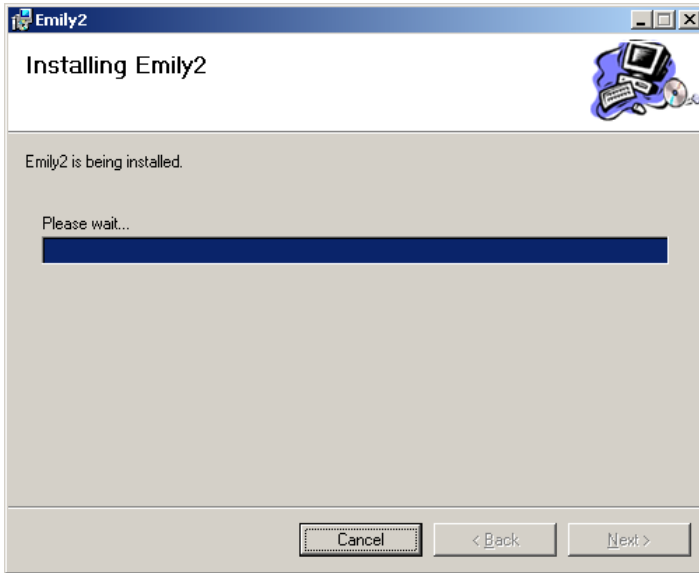

1.2.7 Click "Close" to end the installation.

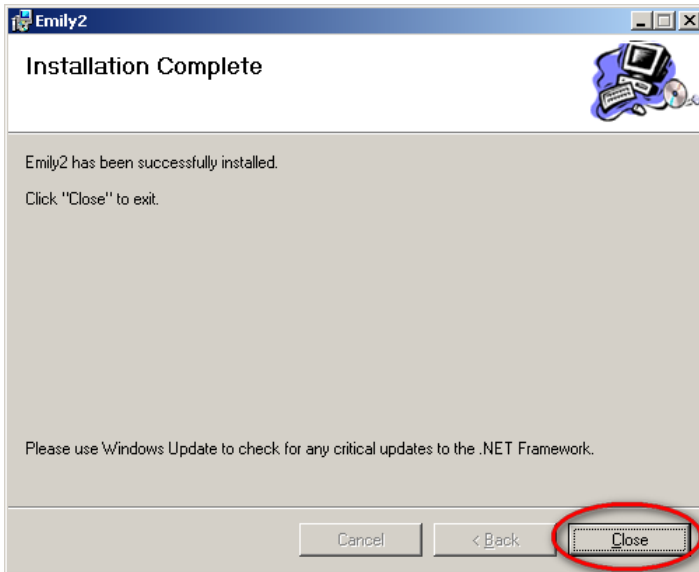


1.3 Instructions on Removing Emily2 Program


Remove Emily2

Step1. Go to Windows Control Panel and select “Add or Remove Programs”.


Step2. Select “Emily2” and click “Remove”.

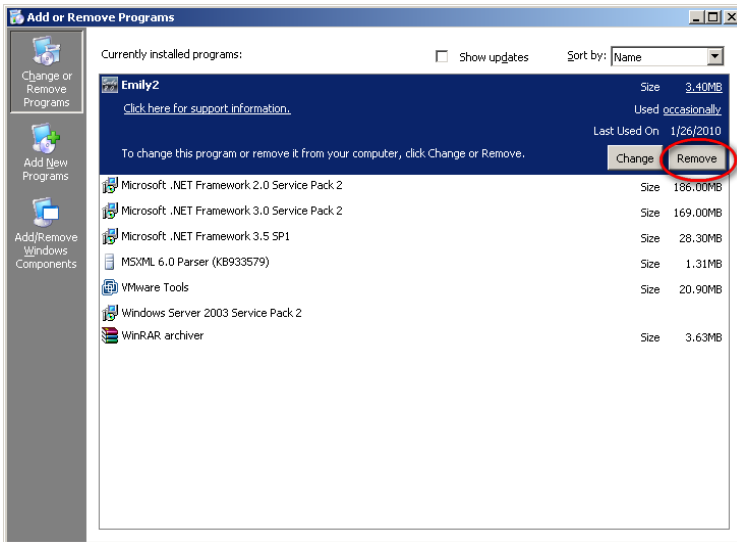

Step3. In the page shown below, click “Yes” to confirm removal of the Emily2 or click “No” to cancel the removal.

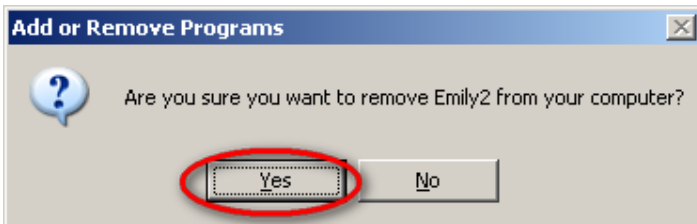

Step4. When the progress bar run to finish, It's complete the removal. Emily2 Icon will disappear in the “Add or Remove Programs” page.

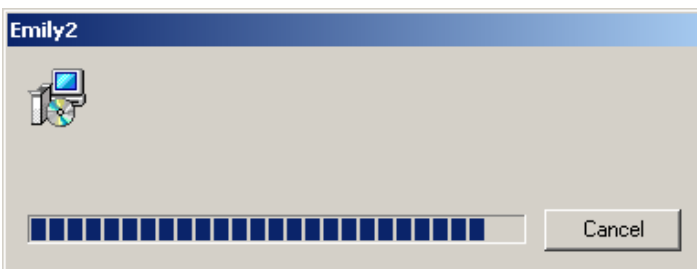

2. Function Descriptions

Emily2 program is user-friendly UPS monitoring software which reveals the status of the UPS via USB or RS232 for up to 4 parallel units. It provides easy to read real time metering of important UPS parameters such as input/output voltage, frequency, UPS temperature, loads & battery capacity. These UPS parameters & status information are recorded and presented in both graphically and numerically.

The “Schedule” function of Emily2 allows user to preset various UPS commands to perform repetition of tasks automatically. In event of Power outage or abnormality, Emily program is capable of automatically informing user via SMS & email instantly and closes application software. The following chapters will provides detailed descriptions of these superior features of Emily2 program.

2.1 Real-Time Information Monitoring Display

The screenshot shows the Emily2 software interface with the following components:

- Menu Bar:** Control, Setting, Data Bank, Schedules, Oscillograph, About.
- Table (A. Tools Field):**

Machine Name	Input Voltage	Output Voltage	Input Frequency	Battery Capacity
Machine 1	115 (V)	113 (V)	60 (Hz)	100 (%)
- Section B. Parallel Unit Information:** A yellow-bordered area below the table.
- Section C. Real Time Information:** A large central panel containing:
 - Power Flow Meter:** Visual indicators for power flow.
 - Input Frequency:** 60 Hz
 - Input Voltage:** 115 V
 - Diagram:** A schematic showing **LINE** connected to a **UPS** unit, which is connected to a **LOAD**.
 - Output Voltage:** 113 V
 - UPS Load:** 0 %
 - Battery Capacity:** 100 %
 - Temperature:** 32.0 °C and 89.6 °F
- Panel C1. Rating Information:**
 - Rated Voltage: 110 V
 - Rated Current: 9 A
 - Battery Voltage: 36 V
 - Frequency: 60 Hz
- Panel C2. Machine Information:**
 - Manufacturer: [Empty]
 - UPS Model: UPS3000
 - Firmware Version: MP00164Q

A. Tools Field

Function	Descriptions	Remarks
Control	This function include: Self Test, UPS Shutdown. In this function, you can send command to unit in this time.	
Setting	There are 3 parts in this item: “General Setting”, “SMS Setting”, And “Email Setting”. 1. “General Setting”: setting of Communications, Multi language, Setting of Shutdown. 2. “SMS Setting”: SMS alert function set up. 3. “E-mail Setting”: E-mail alert function set up.	
Data Base	There are 2 parts in this item: “Event Log” And “Data Log”. 1. “Event Log”: Provides a list of records of events, command entries, alarms, etc. 2. “Data Log”: Stores the UPS operating parameters monitored & recorded by the Emily2.	
Schedules	Provides scheduling of to-do events and commands.	
Oscillograph	Graphical overall of the recorded UPS parameters data.	
About	Record the version number and proprietor name of the Emily2.	

B. Parallel Unit Information

Provides input/output voltage, frequency, loads of UPS parameters for up to 4 parallel units at the same time.

C. Real Time Information

When you select unit in Parallel Unit Information zone, the details of UPS parameters will show on this zone.

This zone includes: “Icon page”, “Value page”, “Rating Information”, and “Machine Information”.


C1. Rating Information

Provides rating information of the connected UPS such as Rating Voltage, Rating current, Battery Voltage, and Frequency.

C2. Machine Information



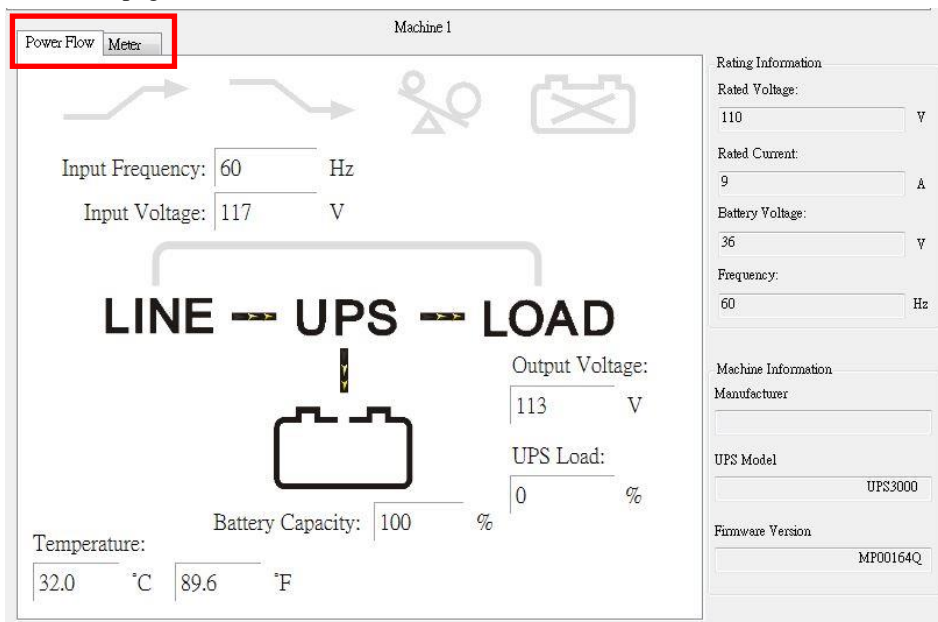

Provides machine information of the connected UPS such as Manufacturer, UPS Model, and Firmware Version.

Power Flow page :




※ Symbols Description



State	Symbols	Description	Remarks
Boost		Non-Boost	
		Boost	
Buck		Non-Buck	
		Buck	
Over Load		Non-Over Load	
		Over Load	
Battery State		Non-Battery Disconnect	
		Battery Disconnect	



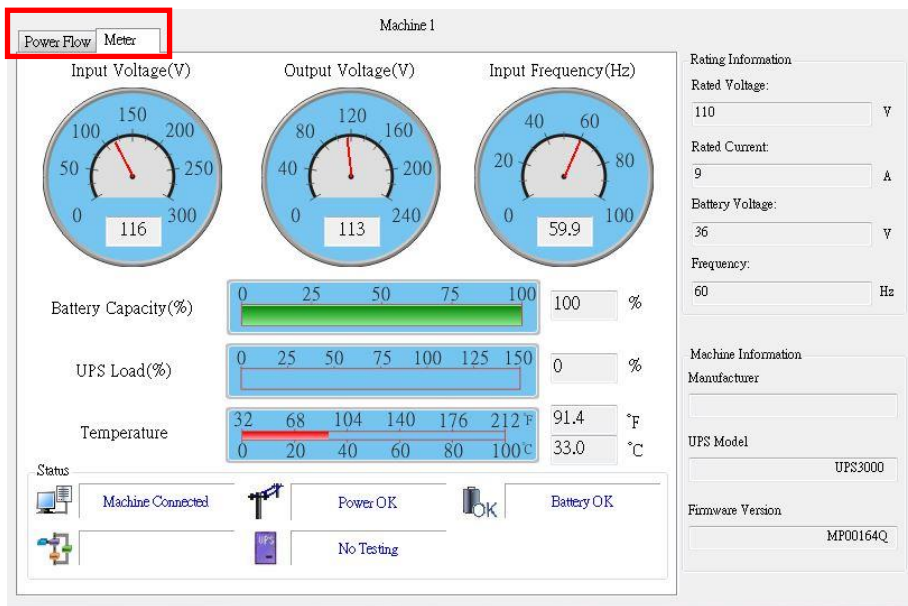


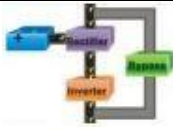
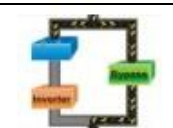




Battery State		Battery OK	
		Battery Low	
By Pass		Non-By Pass	
		By Pass	

Meter Page:




※ **Symbols Description**

State	Symbols	Description	Remarks
Connection State		UPS connected. This symbol represent when the UPS is successfully connect to the Computer.	
		UPS disconnected. The connection between the UPS & the Computer is disrupted.	

Power State		Power Supply OK.	
		Power Failure. The utility supply is absent or abnormal conditions.	
UPS Battery State		Battery Level OK.	
		Battery Low. The UPS battery is near to end of discharge or is at low power level. (2 Icon swap)	
			
UPS Models		ON LINE Model.	
		OFF LINE Model.	
Test State		UPS No Testing.	
		UPS Testing.	
By Pass		By Pass mode. (2 Icon swap)	
			


2.2 Control

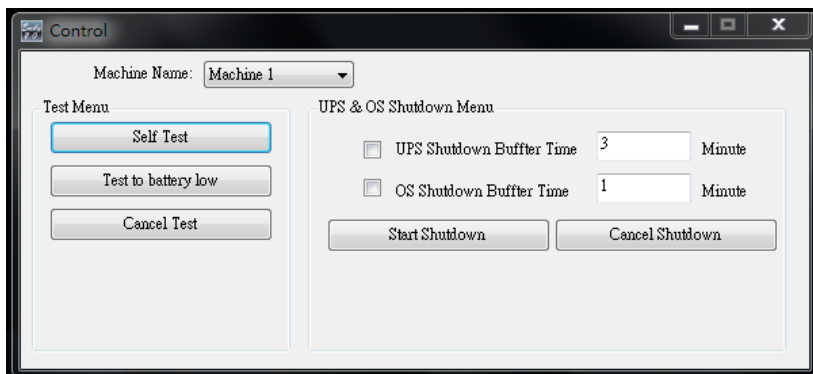


Provides command to UPS for self-test, battery discharge test, stop test, shut-down, stop shut-down and OS for shut-down, stop shut-down.

2.3 General Setting

Allows user to select & set the connecting Com port or Remote, UPS or OS shutdown, etc.

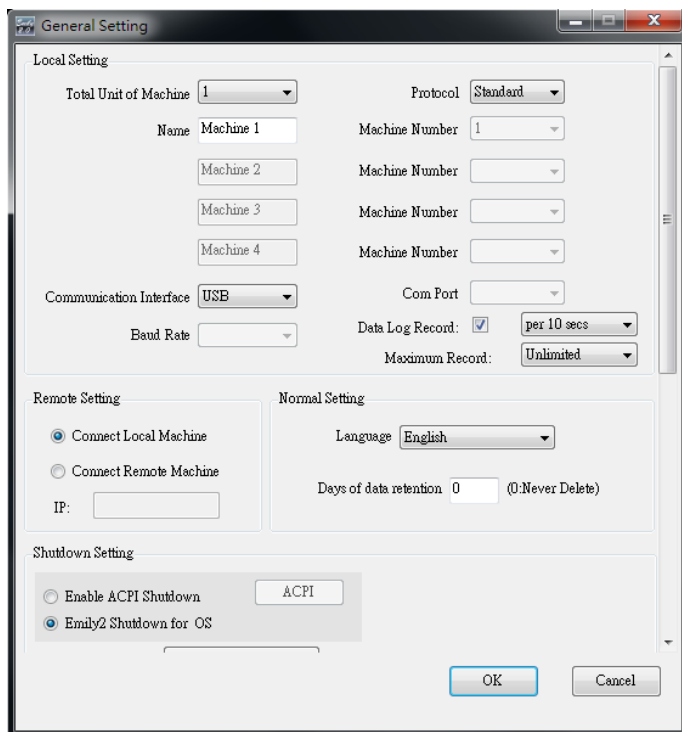

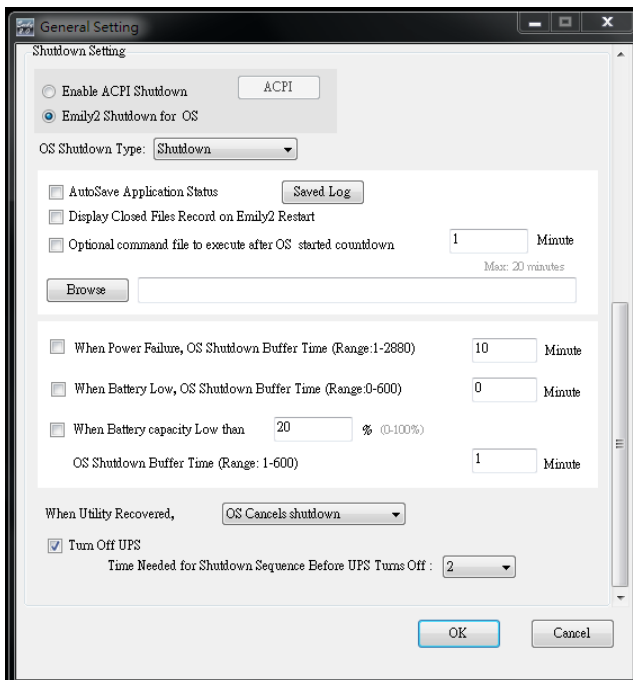

2.3.1 Setting amount of unit, and choose the Protocol.

Total Unit of Machine Protocol


2.3.2 Setting number of unit, and unit name which show on the Real Time Information Monitoring Display form.

Name	<input type="text" value="Machine 1"/>	Machine Number	<input type="text" value="1"/>
	<input type="text" value="Machine 2"/>	Machine Number	<input type="text" value="2"/>
	<input type="text" value="Machine 3"/>	Machine Number	<input type="text" value="3"/>
	<input type="text" value="Machine 4"/>	Machine Number	<input type="text" value="4"/>

2.3.3 Setting Interface and Com Port of connection.

Communication Interface Com Port
 Baud Rate


2.3.4 Data log record setting

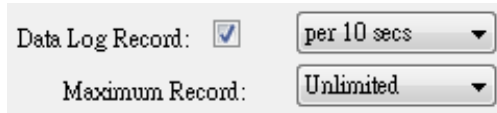

The screenshot shows two settings: "Data Log Record" with a checked checkbox and a dropdown menu set to "per 10 secs", and "Maximum Record" with a dropdown menu set to "Unlimited".

Select the item to enable the data log record, then set record interval time. And set data storage count of record list.


2.3.5 Language Selections

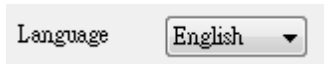

The screenshot shows a "Language" label and a dropdown menu currently set to "English".

The Emily2 program provides various major languages for user selection. The initial start up language will be English.


2.3.6 Data retention setting

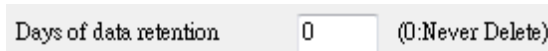

The screenshot shows "Days of data retention" with a text input field containing "0" and a label "(0:Never Delete)".

The period of time user intends to save the data in database. If the value is "0", means data in database never delete.

2.3.7 Remote Setting

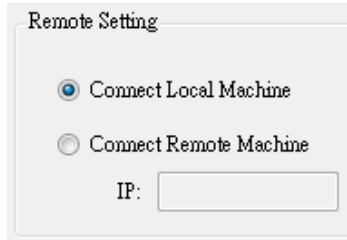


The screenshot shows a "Remote Setting" dialog box with two radio buttons: "Connect Local Machine" (selected) and "Connect Remote Machine". Below the radio buttons is an "IP:" label and an empty text input field.

If you want to remote other computer, please choose "Connect Remote Machine", and insert IP. If choose "Connect Remote Machine", you can't send command, scheduling and Shutdown the UPS, but can Shutdown the computer.


2.3.8 Enable ACPI Shutdown

When Enable ACPI Shutdown, all of the Shutdown functions controlled by ACPI.

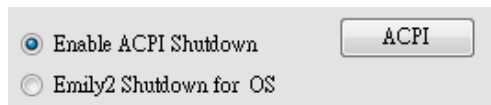


The screenshot shows two radio buttons: "Enable ACPI Shutdown" (selected) and "Emily2 Shutdown for OS". To the right of the radio buttons is a button labeled "ACPI".

Pop up Warning Message.

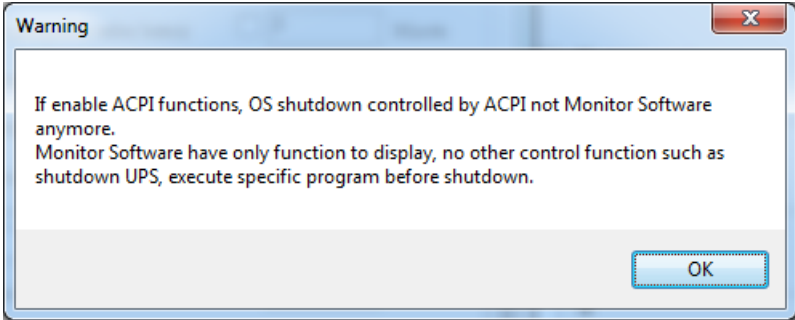

Power buffer times arrange.

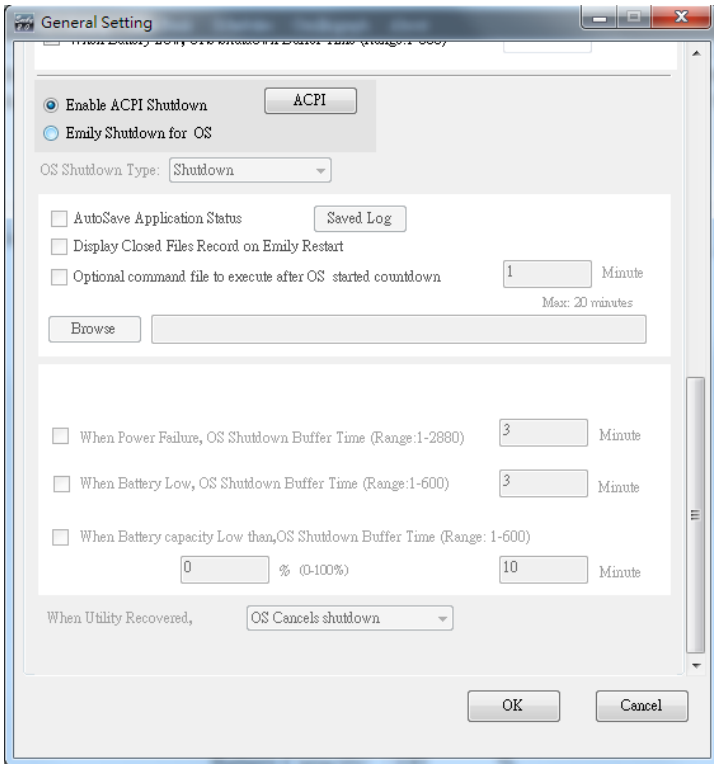


2.3.9 Shutdown Type




If the shutdown type selects “Hibernate” as OS it’s.

2.3.10 Auto save Application


Provides a function to save program when OS shutdown.




Auto close and save Application Files before OS shutdown.



When restart Emily, Pop up the list of Closed Files.



“Record Log”

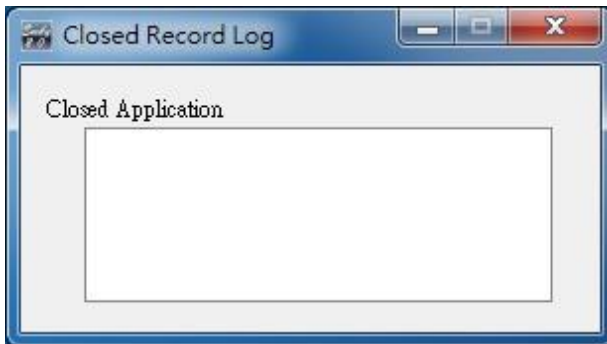


Save AutoSave Directory under My Document.

Documents library

Includes: 2 locations

Arrange by: Folder ▾

Name ^	Date modified	Type	Size	
 AutoSave	3/25/2014 3:04 PM	File folder		

2.3.11 Optional command file to execute after OS started countdown

Select a desire time to execute specific file automatically after OS started Shutdown.
20 min at Max.

Optional command file to execute after OS started countdown Minute
Max: 20 minutes

2.3.12 When Power Failure , OS Shutdown Buffer Time

When Power Failure, OS Shutdown Buffer Time (Range:1-2880) Minute

Select a sufficient time for the computer OS to automatically shutdown when a power outage occurred. The selectable time is from 1 min. to 2880 min.

2.3.13 When Battery low , OS Shutdown Buffer Time

When Battery Low, OS Shutdown Buffer Time (Range:0-600) Minute

Select a desire time to automatically shutdown the computer OS before the UPS battery power is depleted. The selectable time is from 0 min. to 600 min.

2.3.14 When Battery capacity Low than , OS Shutdown Buffer Time

When Battery capacity Low than % (0-100%)
OS Shutdown Buffer Time (Range: 1-600) Minute

Select a desire time to automatically shutdown the computer OS before the battery capacity is lower than xx %.The selectable time is from 1 min. to 600 min.

2.3.15 Action When Utility Recovery

When Utility Recovered,

When utility recovers, continue or cancel the countdown of OS shutting down.

2.3.16 Turn off UPS

Turn Off UPS
Time Needed for Shutdown Sequence Before UPS Turns Off :

Time needed for shutdown sequence before UPS turn off

2.4 SMS

An alert message of recorded event will be sent to a predetermined mobile phone number via a subscribed short message service provider.

SMS Setting

SMS Server:

ID: API ID:

PassWord:

Phone Number:

A Send Test

Send Setting

<input type="checkbox"/> UPS Connected	<input type="text" value="SMS message UPS connect"/>
<input type="checkbox"/> UPS Disconnected	<input type="text" value="SMS message UPS disconnect"/>
<input type="checkbox"/> Shutdown OS	<input type="text" value="SMS message System shutdown"/>
<input type="checkbox"/> Power Fail	<input type="text" value="SMS message Power failure"/>
<input type="checkbox"/> Battery Low	<input type="text" value="SMS message Battery low"/>
<input type="checkbox"/> Power Restored	<input type="text" value="SMS message Power restored"/>
<input type="checkbox"/> UPS Shutdown	<input type="text" value="SMS message UPS shutdown"/>
<input type="checkbox"/> Over Load	<input type="text" value="SMS message Over load"/>
<input type="checkbox"/> Battery Failed	<input type="text" value="SMS message Battery weak"/>
<input type="checkbox"/> UPS Self Testing	<input type="text" value="SMS message UPS test"/>

D OK Cancel

This SMS function is only available through third-party Short Message Service Providers. To use this function you need to subscribe an account on [every8d] or [clickatell]. These are currently the only 2 third-party SMS providers supported by Emily2 program. For more information on subscriptions and charges, please go to their respective website as follow:

1) For [Every8d] : Go to <http://www.every8d.com/>.

Note : Please subscribe as “Corporate” account in order to use Emily2 program SMS function.

2) For [Clickatell] : Go to <http://www.clickatell.com/>

Note : Payment has to be made to obtain an “api_id” before use.

A. Send Test :

Click to send a test message to confirm the settings.

B. Account Settings :

Insert the SMS provided name, ID, passwords, “api-id” (for Clickatell subscriber only) and mobile phone number (international dialing format, include “+” or “00” and country code).

Note : If you want to send message to more than 1 mobile phone number, must use “, ” to separate mobile phone numbers.

C. Event & Message Selections :

Click to select the desire Events to be broadcasted and the respective message contents (You may change and retype the Message contents to meet your requirement in English).

D. Save Setting :

Click “OK” to save & apply settings

Note : Internet Firewall may not allow this SMS function. If you have installed Firewall please allow this function.

2.5 E-Mail Settings

User Name:	Emily2	Email Test	
User Email Address:	XX@XXXX.XXX	Password:	*****
SMTP Server:	XXX.XXX.XXX	SMTP Server Port:	25
Receiver Name:	User	Mail To:	XX@XXX.XXX.XXX
Subject:	Hello		
Send Setting			
<input type="checkbox"/> UPS Connected	Mail message UPS connect		
<input type="checkbox"/> UPS Disconnected	Mail message UPS disconnect		
<input type="checkbox"/> Shutdown OS	Mail message System shutdown		
<input type="checkbox"/> Power Fail	Mail message Power failure		
<input type="checkbox"/> Battery Low	Mail message Battery low		
<input type="checkbox"/> Power Restored	Mail message Power restored		
<input type="checkbox"/> UPS Shutdown	Mail message UPS shutdown		
<input type="checkbox"/> Over Load	Mail message Over load		
<input type="checkbox"/> Battery Failed	Mail message Battery weak		
<input type="checkbox"/> UPS Self Testing	Mail message UPS test		
		OK	Cancel

A. Sent Test :

Click to send a test message to confirm the settings are correct.

B. Account Settings :

Insert the User Name (Sender, e.g. Emily2), User Email Address (select a sender email address specifically for this function), Password (the pass word of your email server), SMTP Server (insert SMTP server or IP address), SMTP Server port (port of SMTP Server), Receiver Name (select a predetermined email address the event messages will be sent to), Mail To (Mail address of receiver), and Subject (select a subject name to acknowledge the receiver).

Note : If you want to send email to more than 1 email address, must use “ ; ” to separate email addresses.

C. Send Setting :

Click to select the desire Events to be broadcasted and the respective message contents (You may change and retype the Message contents to meet your requirement in English).

D. Save Setting :

Click “OK” to save & apply settings.


Note : Internet Firewall may not allow this E-Mailing function. If you have installed Firewall please allow this function.

2.6 Data Log

The “Data Bank” stores all UPS operating parameters monitored & recorded by the Emily2 program.

It facilitates the recorded data (include Input Voltage, Output Voltage, Input Frequency, Battery Capacity, Temperature, Load) for a more effective study of the desire information.

The information in the Data Base can be exported to Excel file.

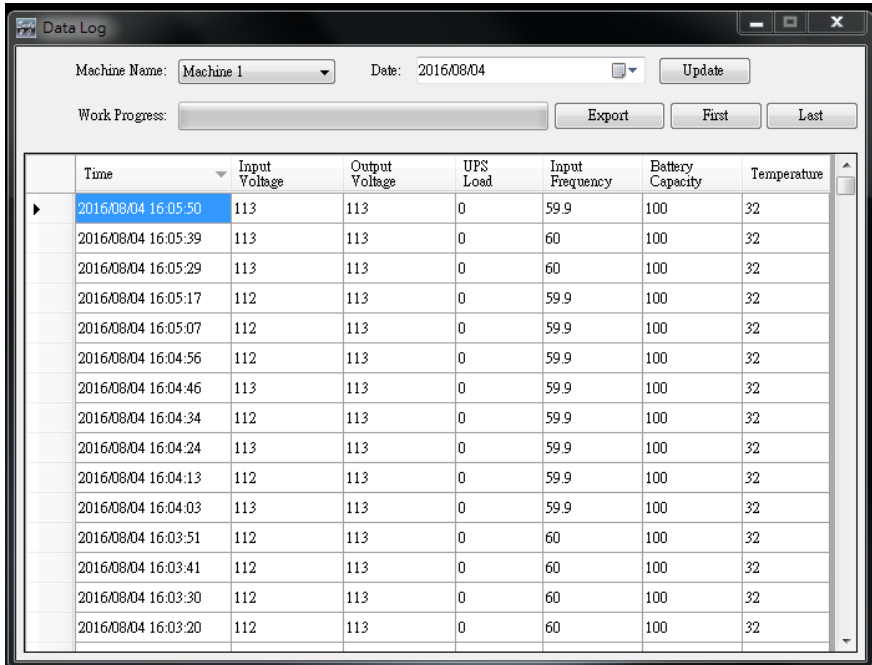

The screenshot shows the 'Data Log' application window. At the top, there are controls for 'Machine Name' (set to 'Machine 1') and 'Date' (set to '2016/08/04'). Below these are buttons for 'Update', 'Export', 'First', and 'Last'. The main area contains a table with the following columns: Time, Input Voltage, Output Voltage, UPS Load, Input Frequency, Battery Capacity, and Temperature. The table lists data points from 2016/08/04 16:05:50 down to 16:03:20.

Time	Input Voltage	Output Voltage	UPS Load	Input Frequency	Battery Capacity	Temperature
2016/08/04 16:05:50	113	113	0	59.9	100	32
2016/08/04 16:05:39	113	113	0	60	100	32
2016/08/04 16:05:29	113	113	0	60	100	32
2016/08/04 16:05:17	112	113	0	59.9	100	32
2016/08/04 16:05:07	112	113	0	59.9	100	32
2016/08/04 16:04:56	112	113	0	59.9	100	32
2016/08/04 16:04:46	113	113	0	59.9	100	32
2016/08/04 16:04:34	112	113	0	59.9	100	32
2016/08/04 16:04:24	113	113	0	59.9	100	32
2016/08/04 16:04:13	112	113	0	59.9	100	32
2016/08/04 16:04:03	113	113	0	59.9	100	32
2016/08/04 16:03:51	112	113	0	60	100	32
2016/08/04 16:03:41	112	113	0	60	100	32
2016/08/04 16:03:30	112	113	0	60	100	32
2016/08/04 16:03:20	112	113	0	60	100	32

2.6.1 Setting Machine Name and date of data



Choose the “Machine Name” and “Date”, click “Search” have the further information.

2.6.2 Tools

Work Progress:

	Time	Input Voltage	Output Voltage	UPS Load	Input Frequency	Battery Capacity	Temperature
▶	2016/08/04 16:05:50	113	113	0	59.9	100	32
	2016/08/04 16:05:39	113	113	0	60	100	32
	2016/08/04 16:05:29	113	113	0	60	100	32
	2016/08/04 16:05:17	112	113	0	59.9	100	32
	2016/08/04 16:05:07	112	113	0	59.9	100	32
	2016/08/04 16:04:56	112	113	0	59.9	100	32
	2016/08/04 16:04:46	113	113	0	59.9	100	32
	2016/08/04 16:04:34	112	113	0	59.9	100	32
	2016/08/04 16:04:24	113	113	0	59.9	100	32
	2016/08/04 16:04:13	112	113	0	59.9	100	32
	2016/08/04 16:04:03	113	113	0	59.9	100	32
	2016/08/04 16:03:51	112	113	0	60	100	32
	2016/08/04 16:03:41	112	113	0	60	100	32
	2016/08/04 16:03:30	112	113	0	60	100	32


Export : Click to export the current data into “xls” or “txt” format.

First : Click to go to the first recorded entry.

Last : Click to go to the last recorded entry.

2.7 Event log

The “Event Log” provides a list of records of all the events & tasks to be performed by the program and those that had occurred on each day of the particular month. It provides a summary of the Utilities conditions and UPS testing results.

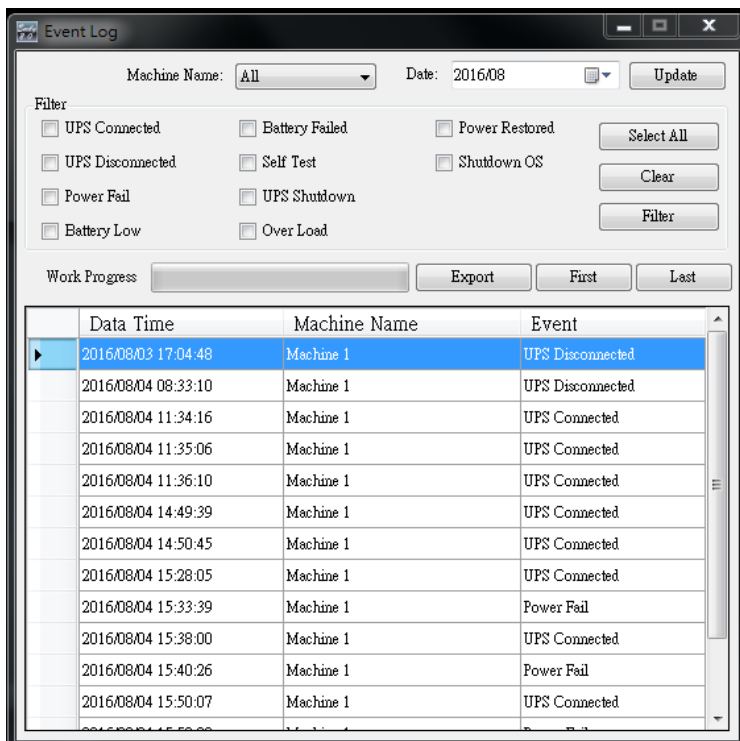


2.7.1 Setting Machine Name and date of data



Choose the “Machine Name” and “Date”, click “Search” to have the further information.

2.7.2 Filter

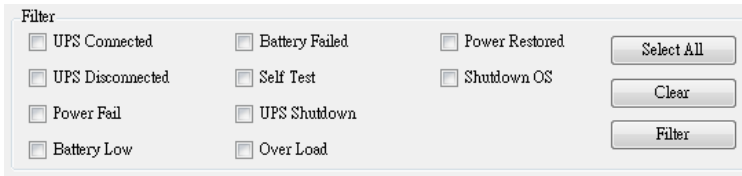

Filter

<input type="checkbox"/> UPS Connected	<input type="checkbox"/> Battery Failed	<input type="checkbox"/> Power Restored
<input type="checkbox"/> UPS Disconnected	<input type="checkbox"/> Self Test	<input type="checkbox"/> Shutdown OS
<input type="checkbox"/> Power Fail	<input type="checkbox"/> UPS Shutdown	
<input type="checkbox"/> Battery Low	<input type="checkbox"/> Over Load	

Select All
Clear
Filter


Please select or unselect the desired parameters by clicking on the respective parameter field box. Click “Filter” to have further information.

Select All : Field box of all events will be “ ”

Clear : Field box of all events will be “ ”

Filter : Click “Filter” the data will show respectively.

2.7.3 Tools

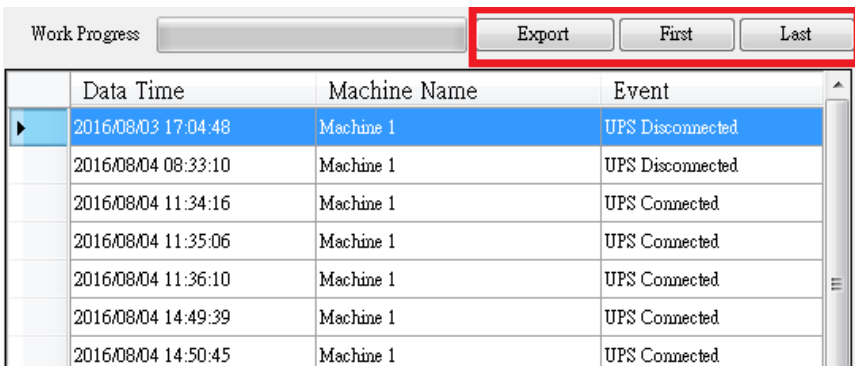

Work Progress

	Data Time	Machine Name	Event
▶	2016/08/03 17:04:48	Machine 1	UPS Disconnected
	2016/08/04 08:33:10	Machine 1	UPS Disconnected
	2016/08/04 11:34:16	Machine 1	UPS Connected
	2016/08/04 11:35:06	Machine 1	UPS Connected
	2016/08/04 11:36:10	Machine 1	UPS Connected
	2016/08/04 14:49:39	Machine 1	UPS Connected
	2016/08/04 14:50:45	Machine 1	UPS Connected

Export First Last

Export : Click to export the current data into “xls” or “txt” format.


First : Click to go to the first recorded entry.

Last : Click to go to the last recorded entry.

2.8 Schedule

“Schedule” allows user to create a desire routine to notify UPS to perform specific or repeatable tasks automatically at predetermined dates & times.

Please refer to the following instructions to create an entry :

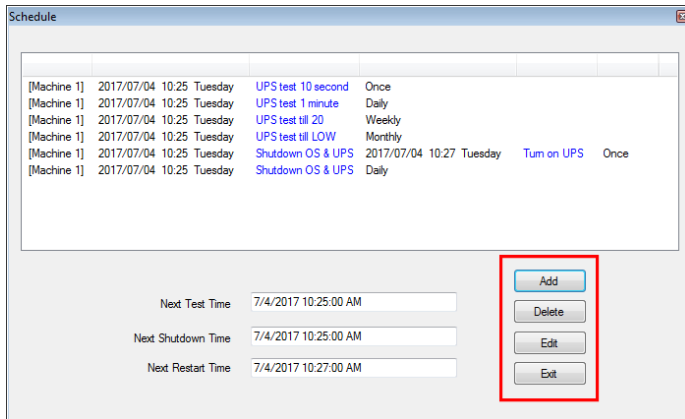

The screenshot shows a window titled "Schedule" with a table of tasks and a control panel. The table lists tasks for [Machine 1] with columns for date, time, day, task name, and frequency. The control panel includes fields for "Next Test Time", "Next Shutdown Time", and "Next Restart Time", and a vertical stack of buttons: "Add", "Delete", "Edit", and "Exit". The "Add" button is highlighted with a red rectangle.

Machine	Date	Time	Day	Task	Frequency
[Machine 1]	2017/07/04	10:25	Tuesday	UPS test 10 second	Once
[Machine 1]	2017/07/04	10:25	Tuesday	UPS test 1 minute	Daily
[Machine 1]	2017/07/04	10:25	Tuesday	UPS test till 20	Weekly
[Machine 1]	2017/07/04	10:25	Tuesday	UPS test till LOW	Monthly
[Machine 1]	2017/07/04	10:25	Tuesday	Shutdown OS & UPS	2017/07/04 10:27 Tuesday Turn on UPS Once
[Machine 1]	2017/07/04	10:25	Tuesday	Shutdown OS & UPS	Daily

Next Test Time: 7/4/2017 10:25:00 AM
Next Shutdown Time: 7/4/2017 10:25:00 AM
Next Restart Time: 7/4/2017 10:27:00 AM

Buttons: Add, Delete, Edit, Exit

Create : Click “Add” to create a new task.

Edit : Step1. Choose the task from the schedule list, the highlighted blue bar is the chosen task.

Step2. Set Machine and schedule items.

Step3. Click “Edit” to modify your selection.

Delete : Choose the task from the schedule list, the highlighted blue bar is the chosen task.

Click “Delete” to delete the task you choose.

Exit : Exit the Schedule

2.8.1 Add

The 'Task' dialog box is shown with three highlighted areas:

- A (Red box):** Date: 2017/07/04 Tuesday, Time: 10:27, Machine: Machine 1. Frequency: Once, Daily, Weekly, Monthly.
- B (Blue box):** Control section with options:
 - UPS Self-Test 10 Secs
 - UPS Self-Test(1-99) 1 Minutes
 - UPS Self-Test Until Battery Capacity 20
 - UPS Self-Test Until Battery Low
 - Shut Down Operating System and UPS Turn On UPS
- C (Green box):** Add and Cancel buttons.

The 'Task' dialog box shows the task name and control options:

- Task Name: OS & UPS Shutdown: 2017/09/13 15:42
- Machine: Machine 1
- Frequency: Once, Daily, Weekly, Monthly
- Control section:
 - UPS Self-Test 10 Secs
 - UPS Self-Test(1-99) 1 Minutes
 - UPS Self-Test Until Battery Capacity 20
 - UPS Self-Test Until Battery Low
 - Shut Down Operating System and UPS Turn On UPS
- Buttons: Add, Cancel

The 'Task' dialog box shows the task name and control options:

- Task Name: OS & UPS Shutdown: 2017/09/13 15:42
- Machine: Machine 1
- Frequency: Once, Daily, Weekly, Monthly
- Control section:
 - UPS Self-Test 10 Secs
 - UPS Self-Test(1-99) 1 Minutes
 - UPS Self-Test Until Battery Capacity 20
 - UPS Self-Test Until Battery Low
 - Shut Down Operating System and UPS Turn On UPS
- Buttons: Add, Cancel

- A. Executive Time :** Machine Name : Choose the machine.
Date : Date Setting.
Time : Time Setting.
OS & UPS Shutdown : Set the shutdown time for OS & UPS.
UPS Reboot : Set the restart time for UPS.
Frequency: Set execute cycle of the schedule.

- B. Control :**
1. Self-test for 10 seconds.
 2. Self-test for 10 minutes.
 3. Self-test til under xx%
 4. Self-test until battery low.
 5. Shutdown the OS & UPS.
Restart the UPS after Shutdown in X minutes .

- C. Function :** Add Or Cancel

2.8.2 Edit

A Task

Date : 2017/07/04 Tuesday Machine : Machine 1

Time : 10:25

Frequency Once Daily Weekly Monthly

B Control

UPS Self-Test 10 Secs



UPS Self-Test(1-99) 1 Minutes

UPS Self-Test Until Battery Capacity 20

UPS Self-Test Until Battery Low

Shut Down Operating System and UPS Turn On UPS

C Edit Cancel

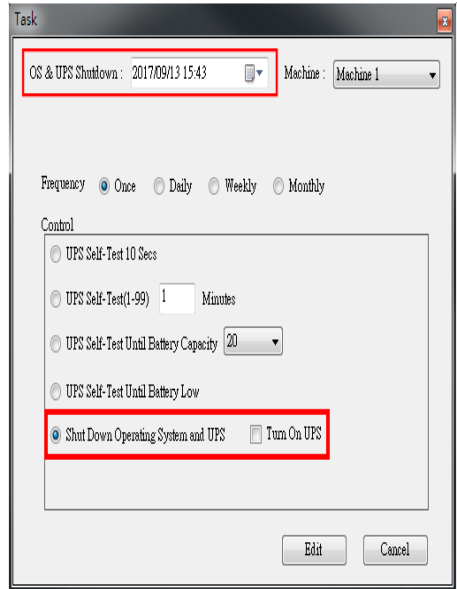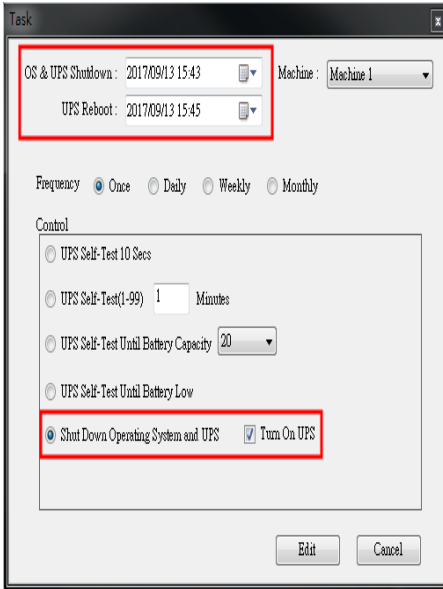

- A. Executive Time :** Machine Name : Choose the machine.
 Date : Date Setting.
 Time : Time Setting.
 OS & UPS Shutdown : Set the shutdown time for OS & UPS.
 UPS Reboot : Set the restart time for UPS.
 Frequency: Set execute cycle of the schedule.
- B. Control :**
1. Self-test for 10 seconds.
 2. Self-test for 10 minutes.
 3. Self-test til under xx%
 4. Self-test until battery low.
 5. Shutdown the OS & UPS.
 Restart the UPS after Shutdown in X minutes .
- C. Function :** Edit Or Cancel

2.9 Oscillograph

The “Oscillograph” provides a summarized report of the recorded UPS operating data. The recorded data are represented in line curves to provide an easy to read summary of the Utility & UPS power quality.



2.9.1 Tools

Machine Name: Date:

Data Name: Time zone:

Range:



Machine Name : Choose the machine which you want to show.

Date : Set the date of data you want to show.

Data Name : 5 items can be chosen: “ALL”, “Input Voltage”, “Output Voltage”, “Input Frequency”, “Battery Capacity”.

Time zone : Choose the time interval.

2.10 Pop up alarms for Power Abnormal

When UPS happens one of Power Fail, Battery Low, Battery Failed, and Overload, it will show alarm window in order to remind user to prompt handle.



2.11 About

Click to confirm version of the Emily2 software.

